

M-30 (Record)	Function	34	Preamp
Line outs 1 - 4	Record	Input 1 - 4	
Line in 5-6	Record		Record Out
Input Selector 5 & 6 set to Line	Record		
Input strip 6 Assign Button 3 down	Record		
Input strip 5 Assign Button 1 down	Record		
Monitor knob 1 (lower) fully left	Record		
Monitor knob 3 (lower) fully Right	Record		
Monitor out	Monitor / Play		Tape in
Recording Note: Input, Synch & Repr buttons on 34		Input down - You monitor what is going into the 34 Synch down - you monitor what is going onto tape Repr down - you monitor what has recorded on tape	

M-30 (Playback)	Function	34	Preamp
Tape In 1 - 4	Playback	Output 1 - 4	
Input Selector 1 & 3 set to Remix	Play	Synch or Repr button down	
Input strip 1 Assign Button 1 down	Play		
Input strip 3 Assign Button 3 down	Play		
Monitor knob 1 (lower) fully left	Play		
Monitor knob 3 (lower) fully Right	Play		
Monitor out	Monitor / Play		Tape in
Playback Note: Synch & Repr buttons on 34		Synch down - you monitor what has recorded on tape Repr down - you monitor what has recorded on tape	