

Index

- Key.....	8-55
+ Key.....	8-54
+/- IN LED.....	8-61
+/- OUT LED.....	8-61
= Key.....	8-54
0 TIME/VID Key.....	8-41
00 Key.....	8-39
1 PRE/A1 Key.....	8-42
2 POST/A2 Key.....	8-42
3 REF/A3 Key.....	8-43
4 SYNCP/A4 Key.....	8-43
5 OFST/CUE Key.....	8-45
6 ERR/TC Key.....	8-47
7 IN Key.....	8-48
8 OUT Key.....	8-48
9 DUR/ASM Key.....	8-48

A

A1 Key.....	8-42
A2 Key.....	8-42
A3 Key.....	8-43
A4 Key.....	8-44
A-C Keys.....	8-28
2-1, 2-7, 7-2	
2-1	
Audio Clock Generator.....	9-15
2-1, 2-7, 2-8	
2-1, 2-7	
Purpose.....	9-16
ACG Card.....	10-1, 10-12
ACG Key.....	8-18, 8-20
AES/EBU time code.....	9-15
ALL STOP Key.....	8-11
ASM Key.....	8-49
Assemble Function.....	8-49
Audio Clock Generator.....	2-1, 10-1, 10-12
Audio Clock Generator Options.....	8-18, 8-20
Audio Clock, setting up with Micro Lynx.....	9-20
Audio Only Studio.....	6-3
Audio/Video Production.....	6-5
AudioVision.....	9-1, 9-3
Auxiliary Function Keys.....	8-50
AVID.....	9-1

Micro Lynx
06/22/00

B

Boot System Unit.....	8-21
BUSY LED.....	8-29

C

Cables.....	1-9, 3-1, 3-4
Calculator Keys	
0 TIME/VID.....	8-41
00 key.....	8-39
1 PRE/A1.....	8-42
2 POST/A2.....	8-42
3 REF/A3.....	8-43
4 SYNCP/A4.....	8-43
5 OFST/CUE.....	8-45
6 ERR/TC.....	8-47
7 IN.....	8-48
8 OUT key.....	8-48
9 DUR/ASM.....	8-48
Accessing registers.....	8-8
CLR key.....	8-39
Equal key.....	8-54
Minus key.....	8-55
Plus key.....	8-54
Calculator Scratch Pad.....	4-21, 8-5, 8-7
Capstan Mode.....	8-23
Capstan Speed.....	8-23
CAPT Key.....	8-53
Changing Master Machine.....	4-17
Changing Memory Size.....	8-27
Chase mode	
with Micro Lynx.....	9-17
2-7	
CLR Key.....	4-21, 8-39
Components.....	1-2
Configuration.....	1-3
Connectors	
For house sync.....	6-5
Keyboard.....	7-8
MAC.....	7-7
MIDI.....	7-6
RS232/422.....	7-7

Index

Time code generator 7-5
Transport..... 7-4
Controlling system with Micro Lynx..... 9-15
CUE Key6-8, 8-11, 8-12, 8-46
Cue Points 6-8, 8-52
CUE Register 6-8

D

Device Select Keys..... 8-18
ACG..... 8-20
EVNT 8-25
LIST..... 8-27
MEM..... 8-27
SETUP..... 8-18
SYS..... 8-20
TRAN 8-21
Digital Audio Clock Generator 2-1, 10-12
Digital Audio Clock Generator Card..... 10-1
Digital Audio Clock Generator, LEDs 8-60
2-7
Display Mnemonics..... 8-5
Display Screen 8-4
Displaying
Calculator data 8-5
Errors 8-10
Machine information..... 8-5
Machine status 8-5
Prompts 8-10
Time Code 8-5
Drop Frame Code..... 8-5, 8-46
Dropouts, Recovery..... 6-6, 6-7
DUR Key..... 8-48
Duration Register, Accessing 8-48

E

Edit In Point 8-48
EDIT Key..... 8-12, 8-18
Edit Loop 6-12
Edit Options 8-18
Editing..... 4-18
ENTR Key..... 8-17
Equal Key..... 8-54
ERR Key 8-47
Error Messages..... 5-5
Error Register..... 8-47
Errors
Accessing error register 8-47
ACG operations 10-21
Displaying..... 5-1, 8-20
Register status by mode 8-47
VSG or System 8-59
When system error occurs..... 8-20

Event Options8-18, 8-27
EVNT Key.....8-18, 8-25
External Computer..... 7-2
External Video..... 6-19

F

F1 Key 8-20
F2 Key 8-20
F3 Key 8-20
FAST FORWARD Key..... 8-13
Film Frame Rate 6-2
Footswitch Recording 6-13
Frame rate
Setting with Micro Lynx..... 9-23
System 9-17
with MTC 9-22
Frame Rate
Default..... 4-5
Displaying 6-2
Matching to video..... 6-5
Fuses 3-3

G

Generating Time Code..... 4-7
GPI
Duration register..... 8-25
Preroll register..... 8-25
Relays, accessing..... 8-25
Select options 8-18
Transport keys 8-25
GPI Closures..... 8-25
2-4
Group Editing 6-12
Group Mode 6-9
Group Options 8-18, 8-31
Group Select Keys
A-C..... 8-28
GRP..... 8-31
LOOP 8-34
MIDI 8-28, 8-30
RDY 8-35
SOLO 8-28, 8-34
TCG..... 8-28, 8-29
TRKS 8-35
Grouping Machines 4-10, 4-11, 6-9
GRP Key..... 8-18, 8-31
GRP LEDs 8-32

H

Hardware Supplied 3-1
Harmonics..... 6-3

House Sync6-5

I

IN 1470/1764 LED8-60
 IN 1600/1920 LED8-60
 IN Key.....8-48
 In Point Register, Accessing8-48
 In Point Short Cut Keys8-20
 Input
 MIDI.....7-6
 Time Code7-5
 Transport7-4
 Video Sync7-3
 Installing Micro Lynx System Hardware.....3-1
 Installing Options
 ACG Card..... 10-21, 10-24
 M3 Card.....10-7
 VITC Card..... 10-28, 10-30
 VSG Card10-2

J

Jam Sync 6-3, 6-7
 JOG Key.....8-17
 Jog Mode..... 8-16, 8-17
 Jog Wheel8-16

K

2-8
 Keyboard Connector7-8
 Keyboard Controller 1-3, 1-4, 6-1, 8-1
 Resetting4-22
 KEYBOARD LED.....7-2
 Keyboard Operations6-14

L

LAST Key 8-17, 8-18
 LED
 +/- IN8-61
 +/- OUT8-61
 ACG.....7-2
 BUSY8-29
 Computer7-2
 IN 1460/1764.....8-60
 In 1600/1920.....8-60
 Keyboard7-2
 LOCK8-29
 M3 7-2, 10-4
 MIDI.....7-2
 MIXED CODE8-58
 NON STD IN.....8-60
 NON STD OUT.....8-61

OUT 1470/1764 8-60
 OUT 1600/1920 8-60
 Power 7-3
 REC.....8-15, 8-29
 REF LOCK 8-58
 REH 8-14
 SYS 8-20
 System..... 7-3
 VIDEO GEN 8-58
 VITC 7-2, 8-59

LEDs

As status indicators 8-58
 Digital audio clock generator 8-60
 Front Panel 7-2
 Group 8-32
 System.....8-20, 8-58
 Lifters, Defeating..... 8-24
 LIST Key 8-27
 LOC Key 8-11
 LOCK LED 8-29
 Locking Machines 4-11
 Longitudinal Time Code..... 8-24, 10-27
 LOOP Key.....8-18, 8-34
 Loop Options..... 8-18
 Loop Play 6-12

M

2-1, 10-4
 2-1, 2-6
 M3 Card..... 10-1
 M3 LED..... 10-4
 MAC Connector 7-7
 Machine Information Display 8-5
 Machine Select Options..... 8-18
 Machine Start Point 6-8
 Machine Status Display 8-5
 Macro
 Defined.....6-15, 8-52
 Deleting..... 6-17
 Preprogrammed 6-17
 Programming..... 6-17
 Setting up 8-52
 Short Cut Keys 8-20
 MACRO Key 8-18, 8-52
 Master Machine 6-10, 6-19
 Changing 4-17
 Mediasound
 Synchronized with Micro Lynx 9-15
 Using with Micro Lynx 9-16
 MEM Key.....8-18, 8-27
 Memory
 Changing size 8-27

Index

Options..... 8-18
Recalling a value..... 4-9, 6-15, 8-27
Registers 6-14, 8-27
Storing to a location..... 4-9, 6-15, 8-27, 8-51, 8-53
Micro Lynx..... 6-1
Code only operation..... 6-19
Components 1-2, 2-3
Connection to VTR..... 9-19
Controlling Mediasound 9-24
Controlling multiple devices 9-3
Controlling one device..... 9-2
Controlling one transport 9-25
Customizing 4-23, 8-9
Defined 1-1, 9-15
Expanding to three machines 10-4
Front Panel..... 7-2
Getting Started 4-1
Keyboard Controller 6-1
MIDI features..... 7-2, 9-11
Synchronized with Mediasound 9-15
System configuration 1-3
System Unit..... 6-1
Using with Mediasound 9-16
With AudioVision 9-3
With Pro Tools..... 9-4

Data source 9-22
MTC output 9-16
MTC synchronizing 9-16
MTC transmitted..... 9-26
Time code setup..... 9-21
 2-5, 2-8
MIDI connector..... 7-6
MIDI Key..... 8-18, 8-28, 8-30
MIDI Options..... 8-18, 9-11
MIDI Setup 7-2
MIDI with Micro Lynx..... 2-5
Minus Key..... 8-55
Mixed Code..... 8-46
MIXED CODE LED 8-58

N

NEXT Key 8-17, 8-18
NON STD IN LED..... 8-60
NON STD OUT LED..... 8-61
Non-drop Frame Code..... 8-46
NTSC 7-3, 10-2

O

Offset Register, Accessing 8-45
Offsets
 Adjusting between machines..... 8-57

Calculating 8-43, 8-45
Displaying 8-50
Machine..... 6-11
Recalling 8-45
Setting 4-12, 6-11
Storing 8-45
Trimming..... 4-16, 8-57
OFST Key..... 8-45
Operating Parameters..... 8-21
Option Card
 ACG 2-7
 Digital Audio Clock Generator 2-1, 10-1, 10-12
 Third Machine..... 2-1, 2-6, 10-1, 10-4
 Video Sync Generator 2-2, 10-1
 VITC Reader 2-2, 10-1, 10-27
 VSG..... 10-2
OUT 1470/1764 LED 8-60
OUT 1600/1920 LED 8-60
OUT Key 8-48
Out Point Register, Accessing 8-48
Out Point Short Cut Keys 8-20
Output
 ACG Card..... 10-19
 MIDI 7-6, 9-16
 time Code 7-5
 Transport 7-4
 Video Sync 7-3

P

PAL 7-3, 10-2
PLAY Key 8-13
Playback, Variable Speed 6-18
Plus Key..... 8-54
POST Key..... 8-42
Postroll Register, Accessing 8-42
Postroll, Adjusting 6-12
POWER LED 7-3
Power Supply..... 1-8, 3-1, 3-2
PRE Key 8-42
Preroll Register, Accessing 8-42
Preroll, Adjusting..... 6-12
Preroll, Creating 6-5
Pro Tools 9-4, 9-9
Procedure
 Changing register values 8-55, 8-56
 Changing the master machine..... 4-17
 Changing the reference machine 4-17
 Configuring Pro Tools as master..... 9-9
 Configuring Pro Tools as slaves..... 9-5
 Controlling a transport device 9-2
 Customizing Micro Lynx..... 8-9
 Displaying messages 8-10

- Editing4-18
 - Generating time code4-7
 - Grouping machines4-10, 4-11, 8-31
 - Recalling register values8-8, 8-50
 - Record enabling a track8-36
 - Setting and clearing sync points8-44
 - Setting system timing parameters4-5
 - Storing a value to a register6-15, 8-51, 8-53
 - Storing values in memory4-9
 - Trimming subframe information8-57
 - Turn on (power up)4-1
 - Video transport assemble8-49
 - Working with macros4-7, 8-52
 - Working with offsets4-13, 4-16, 8-45
 - Prompts5-9
 - Prompts, Displaying8-10
 - Punch In6-13
 - Punch Out6-13
- R**
- RCL Key8-8, 8-50
 - RDY Key8-18, 8-35
 - REC Key8-12, 8-14, 8-18
 - REC LED8-15, 8-29
 - Record Enable
 - A1 track8-42
 - A2 track8-42
 - A3 track8-43
 - A4 track8-44
 - Audio machines8-36
 - Cue track8-46
 - Multitrack machines8-36
 - Resetting4-21
 - Time code track8-47
 - Video transport8-36
 - Record Options8-18
 - Record Ready6-13
 - Recording
 - Punch in, punch out6-13
 - Setting options6-13
 - With footswitch6-13
 - REF Key8-43
 - REF LOCK LED8-58
 - Reference Machine6-10
 - Reference Sync Point Register, Accessing8-43
 - Registers
 - Accessing6-15, 8-8
 - Clearing8-39, 8-48
 - Memory6-14, 8-27
 - Recalling values8-8, 8-50
 - Storing values8-8, 8-51, 8-53
 - Trimming values8-16, 8-55, 8-56
 - REH Key8-12, 8-14, 8-18
 - REH LED8-14
 - Rehearse Options8-18
 - REPLAY Key8-12
 - Reset
 - Group status6-10
 - Keyboard Controller4-21
 - Machine Select Key8-22
 - Machine to default parameters4-22
 - System Unit4-21, 8-21
 - Track record enables4-21
- 2-4
- REWIND Key8-13
 - ROLLBACK Key8-11, 8-18
 - Rollback Options8-18
 - RS232/422 Connector7-7
- S**
- Sample rate
 - Parameters9-17
 - Setting for system9-20
 - with MTC9-22
 - 2-1
 - Select GPI Options8-18
 - Self Test Messages5-4
 - Serial Time Code8-24
 - Setting Machine Offsets6-11
 - Setting Time Code6-2
 - SETUP Key4-24, 8-18
 - Setup Parameters2-3, 4-24
 - SGI ports
 - Digital I/O9-15
 - Serial Port 29-18
 - SGI Workstation
 - Digital Audio output9-18
 - SHTL Key8-17
 - Shuttle Mode8-16
 - Shuttle Wheel8-16, 8-17
 - Slave machine9-15
 - SMPTE time code9-15
 - SMPTE Time Code6-2
 - SMPTE, Synchronizing9-16
 - Software Version Number8-20
 - SOLO Key8-28, 8-34
 - Solo Mode6-7
 - Sony VO-58502-6, 10-4
 - Source Sync Point Register, Accessing8-43
 - Specifications1-6
 - Start Point6-8, 6-11
 - Status
 - Current machine8-5, 8-21

Index

Group Status Mode 8-31
Mode 8-47
STO Key 8-8, 8-51
STOP Key 8-13
Striping Time Code 6-4, 6-17, 8-23, 8-52
SUBFR Key 8-57
Subframe
 Displaying errors 8-47
 Entering information 8-57
 Trimming information 8-57
Sync
 with video 9-15
Sync Point
 Clearing 8-44
 Displaying 8-50
 Reference register 8-43
 Setting 8-44
 Source register 8-43
Sync pulse generator (VSG card) 9-15
Synchronization, SMPTE 6-2
Synchronizing
 Capstan mode 8-23
 Drop with non-drop 8-46
 Multiple machines 6-9
 Two audio tape machines 6-3
 Using control track data 8-24
 Using serial time code 8-24
 With Audio Clock Generator 10-12
SYNCP Key 8-43
SYS Key 8-18, 8-20
SYS LED 8-10, 8-20
System
 Controlling with Micro Lynx 9-15
 Micro Lynx reference 9-22
 Setting sample rate 9-20
System configuration 9-17
System Error 8-10, 8-20
System Error Messages 5-1
SYSTEM LED 7-3
System Options 4-24, 8-18, 8-21
 2-1, 4-5
System Unit 1-3, 1-4, 3-1, 6-1, 7-1
 2-1
 Resetting 4-21
System, Resetting 8-21

T

TC Key 8-47
TCG Key 8-18, 8-28, 8-29
TCG Options 8-18
Third Machine 2-1, 2-6
Third Machine Card 10-1, 10-4

Time
 Setting reference time base 9-22
Time code
 Drop frame 9-15
 MIDI on Micro Lynx 9-21
 Non-drop frame 9-15
 Storing values 8-8
 Type parameters 9-17
 Type with MTC 9-22
Time Code
 Calculating in mixed code 8-46
 Calculating offsets 8-45
 Capturing values 8-53
 Generating 4-7
 How to set 6-2
 Input/Output 7-5
 Longitudinal 8-24, 10-27
 Reading from tape 8-24
 Recalling stored values 4-9, 8-8, 8-27, 8-50
 Recovery from problems 6-6
 Selecting source 6-19, 8-24
 Serial 8-24
 SMPTE 6-2
 Storing values 4-9, 8-51
 TCG Options 8-18
 Track record enable 8-47
 Vertical 10-27
Time Code Display 8-5
Time Code Generator
 Mode 9-24
 Play/Wind 9-26
 System Reference 9-22
 System Speed/Code Type 9-23
Time Code Generator Setup 4-5
TIME Key 8-42
Track Options 8-18
Tracks
 Record Ready 6-13
 Safe mode 6-14
 Selecting 6-14
TRAN Key 8-18, 8-21
Transport
 2-4
 Customizing with M3 10-4
 In code only 6-20
 Input/Output Port 7-4
 Installation 9-25
 Multiple machines 6-9
 Options 8-18
 Resetting parameters 8-39
 Selecting 9-17

