


Tascam Interface Cable for ES-50 SLAVE I/F Connector, p/n IFC5TAS1D

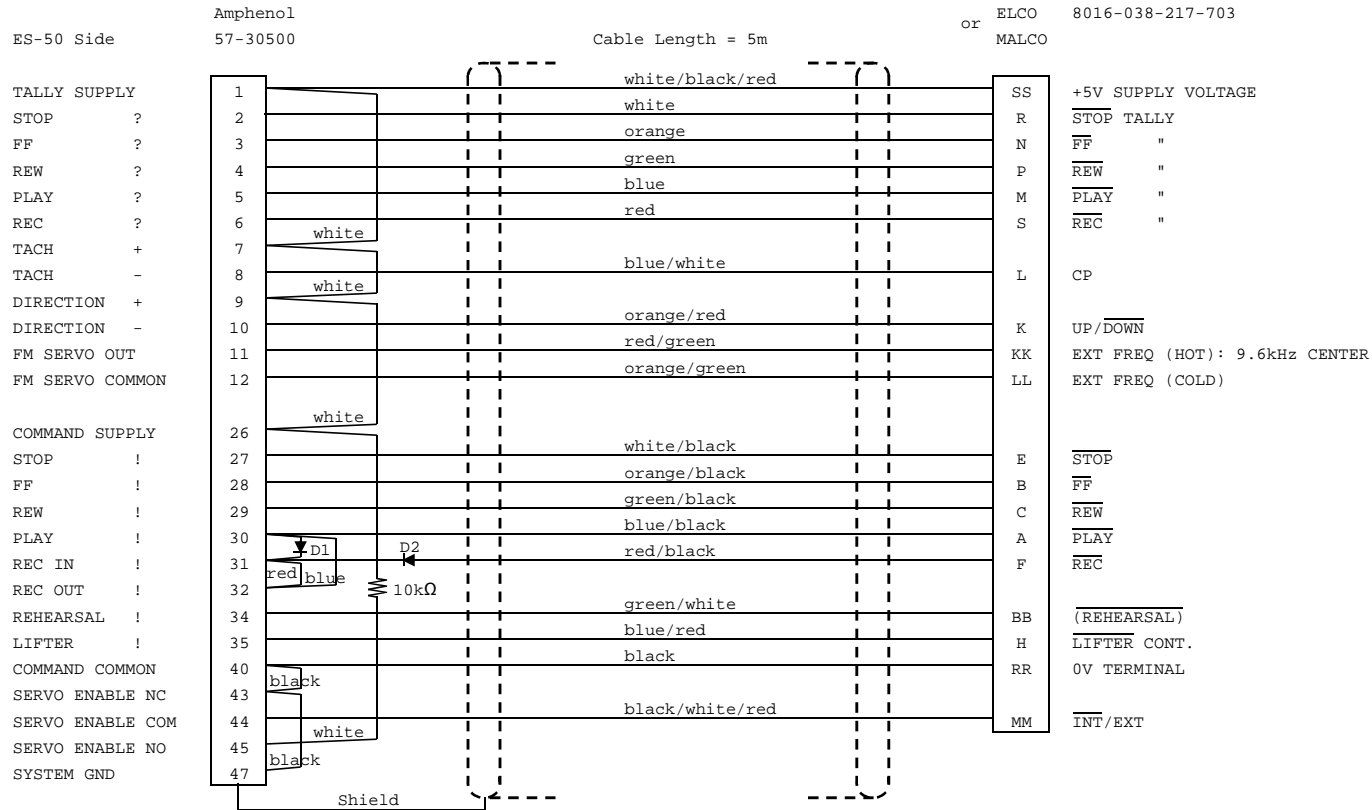

? = TALLY
! = COMMAND

D1: ISS-133
D2: ISS-133

Unused spare 4 wires
1. black/red
2. black/white
3. red/white
4. red/white/black

Note:
1. This cable adapts for Tascam "MTRs", but:
(1) If customer wants to use below models, please cut "red" short wire between pin #31 and #32 of Amphenol connector.
Applicable models: 388, MS-16, ATR-60, ATR-80
(2) If customer wants to use below models, please cut "blue" short wire between pin #30 and #32 of Amphenol connector.
Applicable models: 40 and 50 series
2. Some models don't have "REHEARSAL" terminal.
3. If servo noise is in audio, cut black wire between pin #43 and #47 of Amphenol connector.