


	2	3	4	MASTER	SLAVE
OFF	NC	NC	NC	SERIAL	SERIAL
OFF	NC	NC	NC	SERIAL	PARALLEL
OFF	ON	NC	NC	PARALLEL	SERIAL
ON	ON	NC	NC	PARALLEL	PARALLEL

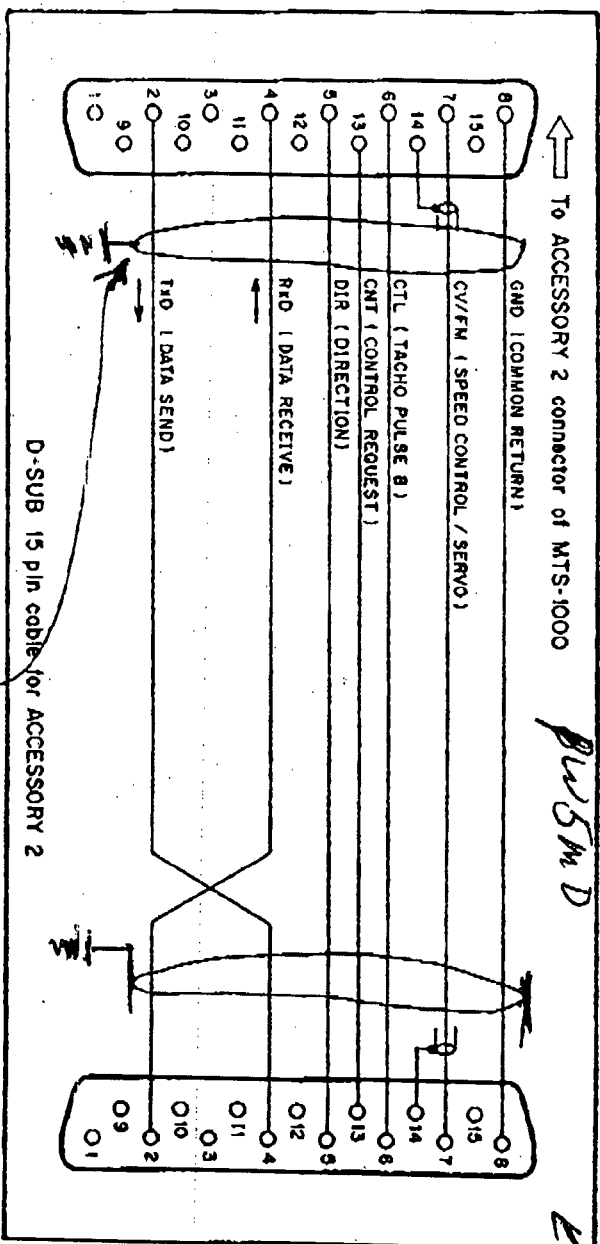

IF RF B. Problems disconnect cable and
step back shield clamp to PVC

Hope it helps!
Jim Finch
X750

MTS-1000

Multi Synchronizer/Controller

8/14 ABD together
inside midizer

IF USING 2 SERIAL
W/ DIVERS 1E 2E 3E
you need to use isolation
Box (photo coupled) on serial
(RS232) IF

2 serial
isolation box