

4-4 HEAD BASE POSITION

4-4-1 STOP MODE

1. With the deck in STOP mode, adjust the trim pot R543 so that the head base comes to the lowest position.
2. Turn the reduction pulley (see fig. 3-4) with your hand to check whether the head base exceeds the lowest position adjusted above or not.
3. If it does, adjust R543 again.
4. Repeat steps 1 through 3 until a good result is achieved.
5. Operate the deck in the sequence of PLAY, STOP, PLAY, and finally power-off modes. Repeat this sequence two or three times.
6. Then observe the stop position of the head base. If the head base still exceeds than the position in step 3, readjust R543 and repeat steps 1 through 6 until the head base comes to the lowest position.

4-4 ヘッド・ベース位置

4-4-1 ストップ・モード時

1. ストップ・モード時に、ヘッド・ベースが最も下方にくるように半固定抵抗 R543 を調整する。
2. 減速プーリー (図3-4参照) を手で回転させ、ヘッド・ベースが上記の調整位置よりさらに下へくるかどうか確認する。
3. もし下へくるようならば、R543 をさらに調整する。
4. 1～3 項を繰り返して、結果が良くなるようにする。
5. プレイ・モードからストップ・モード、そしてプレイ・モードから電源を切る操作を 2、3 度繰り返す。
6. 5 項を終了後、ヘッド・ベースの停止位置を見る。もし、3 項で調整された位置より下にくるようならば、R543 をさらに調整し次に 1～6 項を繰り返して、ヘッド・ベースが最も下にくるようにする。

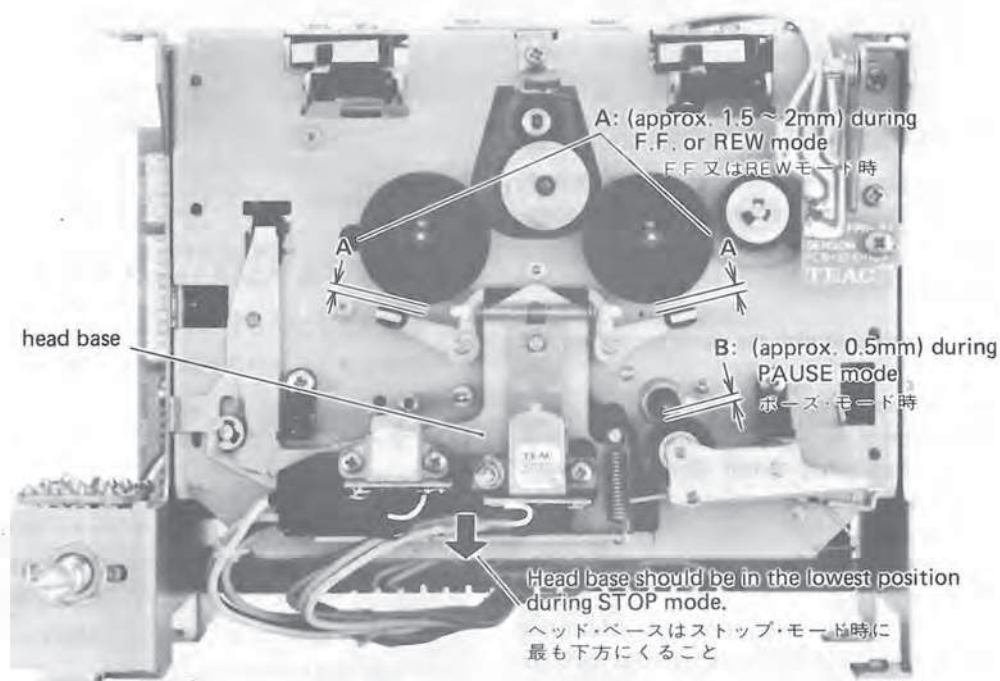


Fig. 4-2

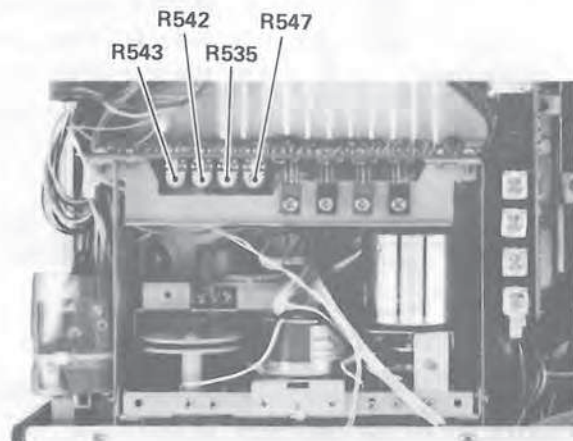


Fig. 4-3