

Installation Guide

For Sony Type 'A' Transport Control Cable

TIMELINE VISTA, INC.
1755 LA COSTA MEADOWS DRIVE, SUITE B
SAN MARCOS, CA 92069
TEL. 760-761-4440
(FAX 760-761-4449)
SUPPORT@DIGAUDIO.COM

DATE: 07/13/93

MODEL: Lynx-2 and Lynx Modules

REVISION: All

CABLE SERIAL NO: 5032 and up

SOFTWARE: All

REQUIRED PARTS:

Sony Type "A" Transport Control Cable, TimeLine Part Number 71C017

DESCRIPTION:

ATTN: Sony APR-24 Users

The TimeLine Sony Type "A" Transport Control Cable now accommodates rehearse modes.

The rehearse command is pinned, BUT NOT INSERTED, as the Type "A" cable can be used for other Sony transports that do not support the rehearse command.

PROCEDURE:

To connect the rehearse line, remove the two retaining screws holding the Sony male 50-pin 'D' connector shell in place. Remove the shell from the connector, and locate the pinned wire covered with clear shrink tubing. Remove the protective tubing and INSERT THIS PIN INTO HOLE 32. Replace connector hood.

Software requirements for Sony APR-24:

All APR-24's support the rehearse function

Other Sony settings:

None

Cables

Older TimeLine Lynx cables will not have this pin fitted to the rehearse line.

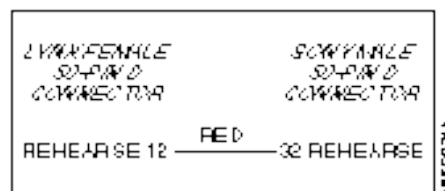


Figure 1. Rehearse Pin Connector